1、 K030 4-Eye audience 3-in-1 point control DMX channel menu AH30 DH121

7-channel mode (A001 status)

	-channel mode (A001 Status)			
channel	function	explain		
CH1	Total dimming	Total dimming, from dark to bright		
CH2	1-4 eyes r dimming	1-4 eyes r dimming, from dark to bright		
CH3 1-4 eye g dimming		1-4 eyes g dimming, from dark to bright		
СН4	1-4 eye B dimming	1-4 eye B dimming, from dark to bright		
CH5	Total stroboscopic	Global stroboscopic, from slow to fast		
	Function selection	0: dimming mode;		
		1 - 50: color selection (selected by ch7);		
		51-78: single jump effect 1-single jump effect 28;		
		79-100: jump all effects;		
СН6		101-28: single gradient effect 1-single gradient effect 28;		
		129-150: gradient all effects;		
		151-178: single pulse effect 1-single pulse effect 28;		
		179-200 pulse change all effects;		
		201-255: voice control (ch7 selects voice control 1 and 2)		
СН7	Function speed	Function speed, from slow to fast (color selection for color output and voice control for stroboscopic and jump)		

16 channel mode (D001)

channel	function	explain	
CH1	Total dimming	Total dimming, from dark to bright	
CH2	Total stroboscopic	Global stroboscopic, from slow to fast	
СН3	Function selection	0: dimming mode; 1 — 50: color selection (selected by CH4);	
СПЭ		51-78: single jump effect 1-single jump effect 28; 79-100: jump all effects;	

	T	T		
		101-28: single gradient effect 1-single gradient effect 28;		
		129-150: gradient all effects;		
		151-178: single pulse effect 1-single pulse effect		
		28; 179-200 pulse change all effects;		
		201-255: voice control (CH4 selects voice control		
		1 and 2)		
		Function speed, from slow to fast (color selection		
CH4	Function	for color output and voice control for stroboscopic		
CITT	speed	and jump)		
	1 eye r	1 eye r dimming, from dark to bright		
CH5	dimming	1 eye i dinining, nom dark to origin		
	1 eye g	1 eye g dimming, from dark to bright		
CH6	dimming	J - B dimining, mem durit to origin		
CILE	1 eye B	1 eye B dimming, from dark to bright		
CH7	dimming	,		
CHO	2 eyes r	2 eyes r dimming, from dark to bright		
CH8	dimming			
СН9	2 eye g	2 eyes g dimming, from dark to bright		
C119	dimming			
CH10	2 eye B	2 eye B dimming, from dark to bright		
CITIO	dimming			
CH11	3 eye r	3 eyes r dimming, from dark to bright		
CIIII	dimming			
CH12	3 eye g	3 eyes g dimming, from dark to bright		
C1112	dimming			
CH13	3 eye B	3 eye B dimming, from dark to bright		
	dimming			
CH14	4 eye r	4 eyes r dimming, from dark to bright		
	dimming			
CH15	4 eye g	4 eyes g dimming, from dark to bright		
	dimming			
CH16	4 eye B	4 eye B dimming, from dark to bright		
	dimming			

2、 display menu

Serial number	content	Numerical range	Function and description
1	A001	001- 512	DMX512 address code setting -7 channel mode

2	d001	001- 512	DMX512 address code setting -16 channel mode
3	r255	000 - 255	1-4 eyes with red dimming, from dark to bright.
4	G255	000 - 255	1-4 eyes green dimming, from dark to bright.
5	b255	000 - 255	1-4 eyes with blue dimming, from dark to bright.
6	FH00	00 - 99	No stroboscopic at 00, global stroboscopic at 01-99, from slow to fast.
7	CL01	01 - 78	Manual color selection mode.
8	CC99	01 - 99	Jump from slow to fast.
9	DE99	01 - 99	Gradient, from slow to fast.
10	CP99	01 - 99	Pulse changes from slow to fast.
11	SU01	01 - 02	Mode: 1 refers to stroboscopic jump, 2 refers to jump

2. Master slave description

In D001 or A001 status, the slave signal is automatically received without additional setting.