

1、 7 4-in-1 point control handkerchief lamps, DMX-channel function table

AH80 DH281

8-channel mode (A001 status)

channel	function	explain
CH1	Total dimming	Total dimming, from dark to bright
CH2	R dimming	Red dimming, from dark to bright
CH3	G dimming	Green dimming, from dark to bright
CH4	B dimming	Blue dimming, from dark to bright
CH5	W dimming	White dimming, from dark to bright
CH6	Total stroboscopic	Global stroboscopic, from slow to fast
CH6	Function selection	0: Dimming mode;
		1-5: color selection (selected by CH8);
		6-67: Single jump effect 1-Single jump effect 31;
		68-86: Jump all effects;
		87-147: Single gradient effect 1- Single gradient effect 31;
		148-168: Gradient all effects;
		169-230: Single pulse effect 1- Single pulse effect 31;
		231-250 pulse change all effects;
251-255: Voice control (CH8 selects voice control 1, 2)		
CH8	Function speed	Function speed, from slow to fast (color selection for color output and voice control for stroboscopic and jump)

32 channel mode (d001)

channel	function	explain
CH1	Total dimming	Total dimming, from dark to bright
CH2	Total stroboscopic	Global stroboscopic, from slow to fast
CH3	Function selection	0: Dimming mode;
		1-5: color selection (selected by CH8);

		6-67: Single jump effect 1-Single jump effect 31;
		68-86: Jump all effects;
		87-147: Single gradient effect 1- Single gradient effect 31;
		148-168: Gradient all effects;
		169-230: Single pulse effect 1- Single pulse effect 31;
		231-250 pulse change all effects;
		251-255: Voice control (CH8 selects voice control 1, 2)
CH4	Function speed	Function speed, from slow to fast (color selection for color output and voice control for stroboscopic and jump)
CH5	R1 dimming	Red 1 dimming, from dark to bright
CH6	G1 dimming	Green 1 dimming, from dark to bright
CH7	B1 Dimming	Blue 1 dimming, from dark to bright
CH8	W1 dimming	White 1 dimming, from dark to bright
CH9	R2 dimming	Red 2 dimming, from dark to bright
CH10	G2 dimming	Green 2 dimming, from dark to bright
CH11	B2 Dimming	Blue 2 dimming, from dark to bright
CH22	W2 dimming	White 2 dimming, from dark to bright
CH13	R3 dimming	Red 3 dimming, from dark to bright
CH14	G3 dimming	Green 3 dimming, from dark to bright
CH15	B3 Dimming	Blue 3 dimming, from dark to bright
CH16	W3 Dimming	White 3 dimming, from dark to bright
CH17	R4 dimming	Red 4 dimming, from dark to bright
CH18	G4 dimming	Green 4 dimming, from dark to bright
CH19	B4 Dimming	Blue 4 dimming, from dark to bright
CH20	W4 dimming	White 4 dimming, from dark to bright
CH21	R5 dimming	Red 5 dimming, from dark to bright
CH22	G5 dimming	Green 5 dimming, from dark to bright
CH23	B5	Blue 5 dimming, from dark to bright

	Dimming	
CH24	W5 dimming	White 5 dimming, from dark to bright
CH25	R6 dimming	Red 6 dimming, from dark to bright
CH26	G6 dimming	Green 6 dimming, from dark to bright
CH27	B6 Dimming	Blue 6 dimming, from dark to bright
CH28	W6 dimming	White 6 dimming, from dark to bright
CH29	R7 dimming	Red 7 dimming, from dark to bright
CH30	G7 dimming	Green 7 dimming, from dark to bright
CH31	B7 Dimming	Blue 7 dimming, from dark to bright
CH32	W7 dimming	White 7 dimming, from dark to bright

12	Auto		Automatic effects.
13	SU01	01 - 02	Mode: 1 refers to stroboscopic jump, 2 refers to jump

1、 Master slave description

In D001 or A001 status, the slave signal is automatically received without additional setting.

2、 display menu

Serial number	content	numerical value	Function and description
1	A001	001- 512	DMX512 address code setting -8-channel mode
2	d001	001- 512	DMX512 address code setting -32 channel mode
3	r255	000 - 255	Red dimming, from dark to bright.
4	G255	000 - 255	Green dimming, from dark to bright.
5	b255	000 - 255	Blue dimming, from dark to bright.
6	u255	000 - 255	White dimming, from dark to bright.
7	FH99	00 - 99	No stroboscopic at 00, global stroboscopic at 01-99, from slow to fast.
8	CL01	01 - 64	Manual color selection mode.
9	CC99	01 - 99	Jump from slow to fast.
10	DE99	01 - 99	Gradient, from slow to fast.
11	CP99	01 - 99	Pulse changes from slow to fast.