

一、7led blinder (warm white and white) DMX Channel Value AH20 DH141

6 mode (A001 status)

Channel	function	description
CH1	Master dimmer	master dimming, from dark to bright
CH2	White dimmer	White dimmer, from dark to bright
CH3	Warm white dimmer	Warm white dimmer, from dark to bright
CH4	Master flash	Master flash, from slow to fast
CH5	Function selection	0: dimmer mode
		1—50: select colors (selected by CH6) ;
		51—98: Individual jump effect 1—effect 16
		99-100: full jump effects;
		101—148: Individual gradient effect 1—effect 16,
		149—150: full gradient effect;
		151—198: individual pulse change effect 1—effect 16,
		199—200 full pulse change effect;
201-255: sound control (CH6 select 1、2)		
CH6	Function speed	Function speed, from slow to fast (color selection for color output and voice control for stroboscopic and jump)

18 channel mode (d001)

channel	function	description
CH1	Master dimmer	master dimming, from dark to bright
CH2	Master flash	Master flash, from slow to fast
CH3	Function selection	0: dimmer mode;
		1—50: select colors (selected by CH4) ;
		51—98: Individual jump effect 1—effect 16
		99-100: full jump effects
		101—148: Individual gradient effect 1—effect 16,
		149—150: full gradient effect;
151—198: individual pulse change effect 1-effect 16,		

		199—200 full pulse change effect;
		201-255: sound control (CH4 select 1、2)
CH4	Function speed	Function speed, from slow to fast (under sound control, flash and jump change can be selected)
CH5	White 1 dimmer	White 1 dimmer, from dark to bright
CH6	Warm white 1 dimmer	Warm white 1 dimmer, from dark to bright
CH7	White 2 dimmer	White 2 dimmer, from dark to bright
CH8	Warm white 2 dimmer	Warm white 2 dimmer, from dark to bright
CH9	White 3 dimmer	White 3 dimmer, from dark to bright
CH10	Warm white 3 dimmer	Warm white 3 dimmer, from dark to bright
CH11	White 4 dimmer	White 4 dimmer, from dark to bright
CH12	Warm white 4 dimmer	Warm white 4 dimmer, from dark to bright
CH13	White 5 dimmer	White 5 dimmer, from dark to bright
CH14	Warm white 5 dimmer	Warm white 5 dimmer, from dark to bright
CH15	White 6 dimmer	White 6 dimmer, from dark to bright
CH16	Warm white 6 dimmer	Warm white 6 dimmer, from dark to bright
CH17	White 7 dimmer	White 7 dimmer, from dark to bright
CH18	Warm white 7 dimmer	Warm white 7 dimmer, from dark to bright

二、display value

S.N.	content	value	Function and description
1	A001	001- 512	DMX512 address code setting -6-channel mode
2	d001	001- 512	DMX512 address code setting -18-channel mode
3	r255	000 - 255	White dimmer, from dark to bright
4	G255	000 - 255	Warm white dimmer, from dark to bright

10	FH00	00 - 99	00 no flash, 01-99Stroboscopic, from slow to fast.
11	CL01	01 - 24	Manual color selection mode.◦
12	CC99	01 - 99	Jump from slow to fast.
13	DE99	01 - 99	Gradient, from slow to fast.◦
14	CP99	01 - 99	Gradient, from slow to fast.◦
15	SU01	01 - 02	Mode: 1 refers to stroboscopic jump, 2 refers to jump

3、 Master slave description

In D001 or A001 status, the slave signal is automatically received without additional setting.